


5SC

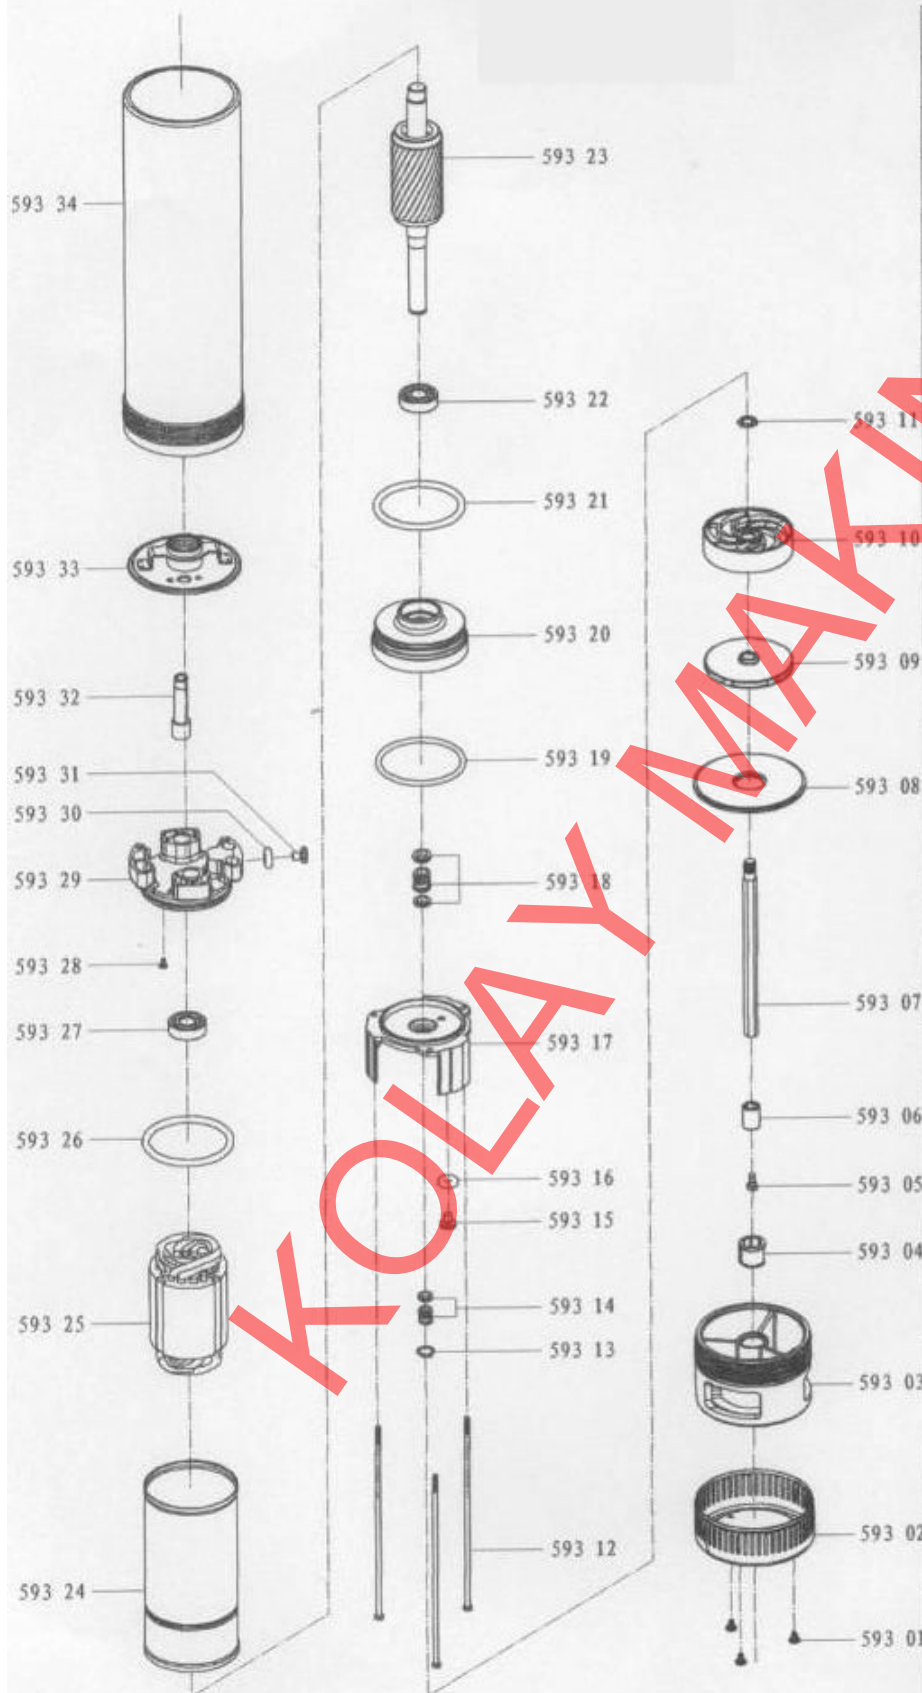

593 01	Screw
593 02	Strainer
593 03	Suction support
593 04	Guide bush
593 05	Screw
593 06	Bearing bush
593 07	Shaft
593 08	Diffuser Cover
593 09	Impeller
593 10	Diffuser
593 11	Sealing gasket
593 12	Screw
593 13	Shaft ring
593 14	Mechanical seal
593 15	Screw
593 16	*O*ring
593 17	Oil chamber cover
593 18	Mechanical seal
593 19	*O*ring
593 20	Oil chamber
593 21	*O*ring
593 22	Deep groove ball bearing
593 23	Motor rotor
593 24	Motor pipe
593 25	Motor stator
593 26	*O*ring
593 27	Deep groove ball bearing
593 28	Screw
593 29	Bearing seat
593 30	*O*ring
593 31	Screw
593 32	Cable shield sleeve
593 33	Outlet
593 34	pump pipe